


C1

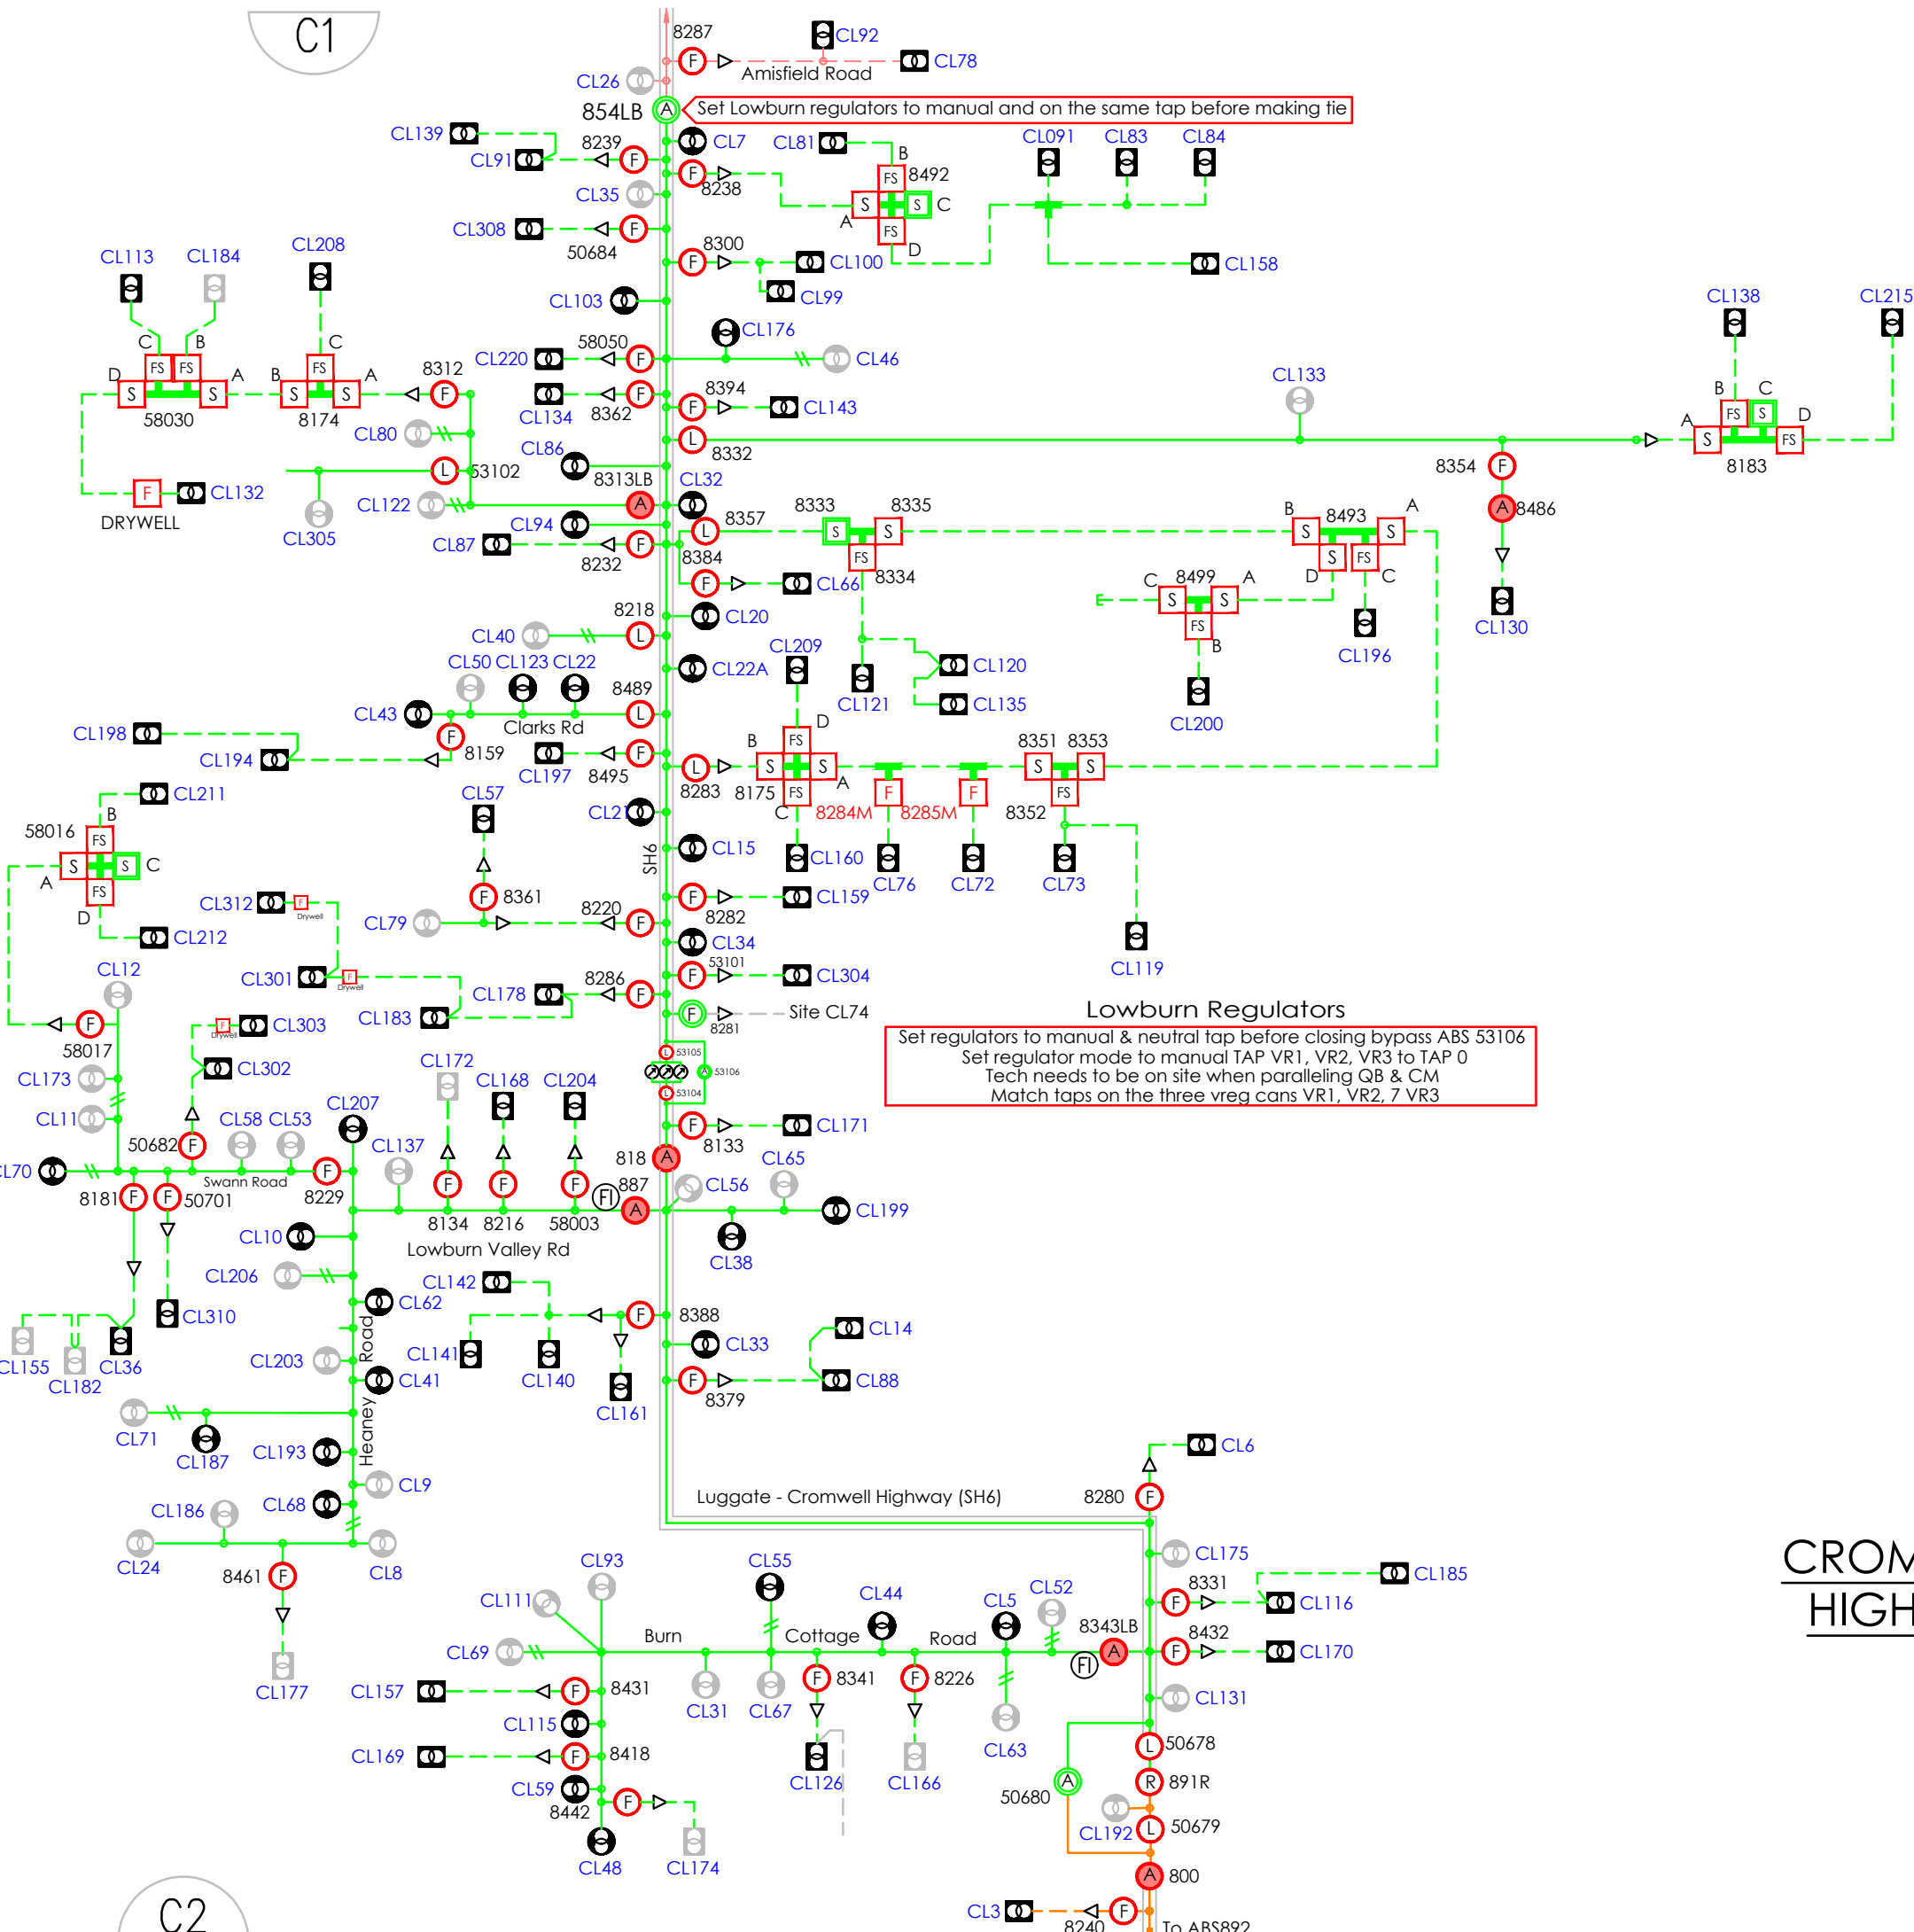

Set Lowburn regulators to manual and on the same tap before making tie

Lowburn Regulators
 Set regulators to manual & neutral tap before closing bypass ABS 53106
 Set regulator mode to manual TAP VR1, VR2, VR3 to TAP 0
 Tech needs to be on site when paralleling QB & CM
 Match taps on the three reg cans VR1, VR2, 7 VR3

Issue AAH
 11/02/26

BY	CKD	APPD
DCH	MGB	DAT

**CROMWELL - LUGGATE
 HIGHWAY (SH6) 11kV**

C2

C2